






















788T Front Panel Button Shortcuts

Function	Key Sequence	Action
Record Tone	 + 	Setup Menu option File: Marker Mode must be set to Markers Disabled. While recording hold the REC button and press the tone button. Tone will be active as long as the tone button is held.
Jam Menu	 + 	Enters the time code jam menu.
Button Lock	 + 	Press backlight then tone to lock all front panel buttons except for Record, Stop and Play. FF and Rew are available in playback mode. Use backlight and tone again to unlock the panel.
Track Setup		Press INPUT to access the Track Setup Window. Meter all 12 available tracks and arm/disarm tracks for recording
Input Routing	 + 	Hold down STOP and press INPUT to cycle through input routing presets and custom routings.
Connect FireWire/USB	 + 	Initiates FireWire/USB connection.

Function	Key Sequence	Action
False Take	 + 	Delete last take prompt.
Increment Scene	 + 	Increments the Scene Name for the next take to be recorded.
Take List / Drive Directory / Toggle Drives		Press once to enter the Take List. Press twice to enter the Drive Directory. Press and hold for 1 second to toggle viewable drives.
Meter Toggle		Press to toggle between VU1 and VU2 views to be displayed in second column of LED Meters. VU1 = Tracks C, D, E, F and VU2 = G, H, X1, X2.
LCD Backlight / LED Level	 + Rotary Switch	Press in on the Rotary Switch to toggle the LCD Backlight. Turn the Rotary Switch to adjust the level of LED brightness.
Flashlight Mode	 +  + 	With the power off, hold down these buttons while powering the unit to enter Flashlight mode. This illuminates all LEDs. Press power again to exit.